

TO LOAD ROLL



PRINTING SETTING



1 To open the label roll holder, pull upwards using the hole provided.

2 To open the base plate, pull down using rounded end of the base plate.

3 Open the inner base plate.

4 Insert the label roll into the holder.

5 Slide the labels through the machine with the labels facing upwards.

6 Close the label roll holder.

7 Pull the labels through the machine, about 10 cms. Close the inner base plate and then the outer base plate, keeping the labels central, as shown.

8 To adjust the print on the labels, slacken the head screws and move the print head backwards or forwards. Then re-tighten the screws.

9 To locate the indicator on the band, move the dial knob and select the required digit, then push it back into place.

10 To open the ink roller holder, pull outwards.

11 Replace the ink roller by pressing gently as indicated.